



C200 cubeiQ for Mobile Device

LTL Configuration Guide (inches)



STEP 1	Update Scan Engine Settings	 CubeiQ in
STEP 2	Update Wireless Settings	 BT BLE
STEP 3	Initiate Pairing process in cubeiQ	Menu>Devices>Find Devices>Scan>Connect