

SET UNITS AND OUTPUTS

Select preferred units and outputs.
Units=mm and Output 0.1 for model C200S only.



Unit mm



Unit cm



Unit in



Output 0.1



Output 0.25



Output 0.5



Output Nearest 1



Output Next 1

SET SUFFIX

Select preferred suffix for use with
Dimensional (DIM) and General (GEN) items.



Suffix Dim CR



Suffix Dim TAB



Suffix Gen CR



Suffix Gen TAB

Additional suffixes and prefixes available at
www.cubetape.com/support

REFERENCES AND RESOURCES



ScanStik
User Guide



Shortcuts

Charge Cradle also contains the Shortcuts Code on base.

For Scan to Pair and NFC pairing options go to
Configuration Guide.

For full manual go to www.cubetape.com/support
For support email support@cubetape.com

DEFAULTS AND FACTORY RESET

Factory default settings are:
Connect to Windows host using dongle.

Sleep time 10 minutes.

Units = inches

Output = nearest inch

Suffix DIM = TAB

Suffix GEN = TAB

Return to factory settings anytime by scanning
Scanner Defaults V2 and Wireless Defaults.



Scanner Defaults V2




Wireless Defaults



cubetape

C200 Series Quickstart Guide

IN THE BOX

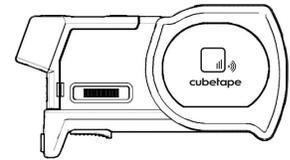

C200




USB Cable



RF Dongle



Charge Cradle
(if selected)

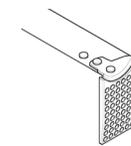

Bigfoot
Silicone Tip



Quickstart Guide






ScanStik

Scan Registration QR code or visit
www.cubetape.com/register to register your device.

ASSEMBLY

1. The tape cassette has guide rails on both sides.
2. The C200 Pod has guide grooves on both sides.
3. Spring latch locks into the tape cassette.
4. Align grooves and rails.
5. C200 Pod slides down into the tape cassette.
6. The latch in the C200 Pod locks into the tape cassette.

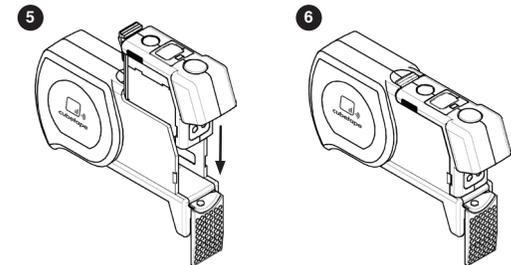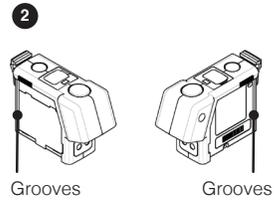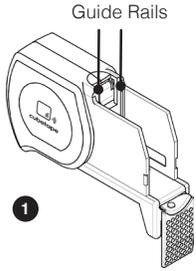

CHARGE BATTERY:

Insert USB cable in port under flap by the Scan button and connect to adaptor or if using charge cradle, connect USB cable and insert C200. Red LED is ON when charging.

POWER ON C200:

Press the Scan button to power on.


REGISTRATION:



Registration

Scan Registration QR code or visit www.cubetape.com/register to register your device.

HOW TO MEASURE

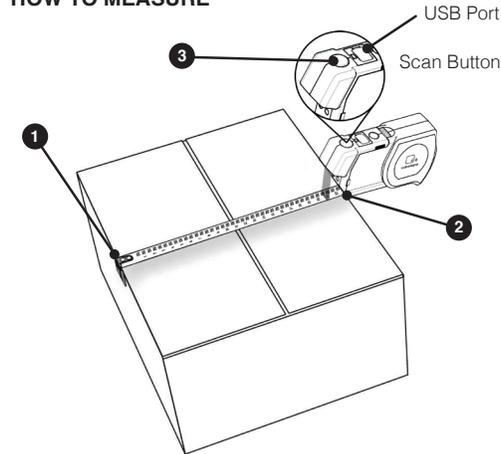

1. Hook the tape end over the far edge of the package.
2. Align the tape exit point to the near edge of the package.
3. Press the Scan button to record and transmit the measurement.

CONNECTING TO HOST



Pair

OPTION 1:

Connect to Windows using RF dongle.

- Scan **Pair**, LED will flash green.
- Insert dongle in spare Windows USB port, LED will turn blue when connected.
- Dimensions and barcodes will now be sent to the active Windows app.



BT Direct (HID)

OPTION 2:

Connect to Android or Windows using Bluetooth Direct Mode (HID).

- Scan **BT Direct (HID)**.
- Scan **Pair** to enter pairing mode. LED will flash alternately blue and green. (To cancel pairing mode press Scan twice).
- Connect Cubetape from Android or Windows connection menu. LED will turn blue when connected.
- Dimensions and barcodes will now be sent to the active app.



BT App (SPP)

OPTION 3:

Connect to 3rd Party Android or Windows app using Bluetooth Application Mode (SPP).

- Scan **BT App (SPP)**.
- Refer to 3rd Party Application Guide.



BT BLE

OPTION 4:

Connect to Android or iOS using Bluetooth Low Energy (BLE)

- Scan **BT BLE**.
- Refer to 3rd Party Application Guide.